

Product information S7-Panel-PLC PC1017T



(Figure contains optional periphery modules)













(valid from PLC-version HMI1017T-xxx- $\underline{02}$)

Changes to older versions of this document

Rev. 01 → 02: New images, new design line, connectors added, drill jig info added (Rev. a: LCD size corrected)

Rev. 02 \rightarrow **03**: Information for disposal of old equipment



Description

S7-Panel-PLC with

- 10,1 TFT display (1066x600 pixel)
- resistive touch (front protection class IP65)

Standard configuration:

RS232 with

- free ASCII protocol

RS485 with

- free ASCII protocol
- Modbus RTU
- with switchable terminate resistors for RS485

2x Ethernet (as switch or separated) with

- S7-connection (Put/Get)
- Send/ Receive via TCP and UDP,
- Modbus TCP

CAN

- protocol compatible to
 CANopen®
- Layer2 communication
- with switchable terminate resistors for RS485

Micro-SD-card slot

- for SD-cards up to 8GByte

Run/Stop switch

State LEDs for Power, Battery, Error, Run

Inserting stripes

 for Logo and identification (thereby customized adaption possible easy)

Additional configuration: (optional)

Profinet IO Controller

Scope of delivery:

- Mounting kit with grounding terminal
- Technical data sheet


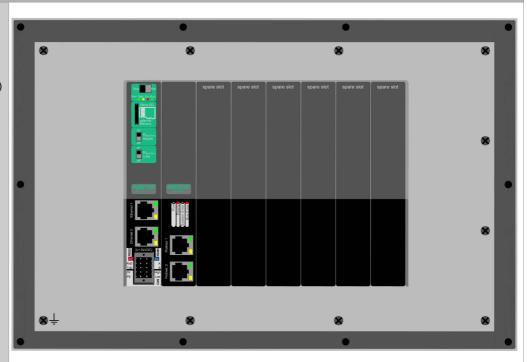


Figure above: View to rear side and connections sides of PC1017T-PNC

Figure below: CPU-connections of all Panel-PLC-devices with periphery slots with CPUs type T and with option Profinet IO Controller on slot 1




INSEVIS Gesellschaft für Systemelektronik und Visualisierung mbH • Am Weichselgarten 7 • D-91058 Erlangen

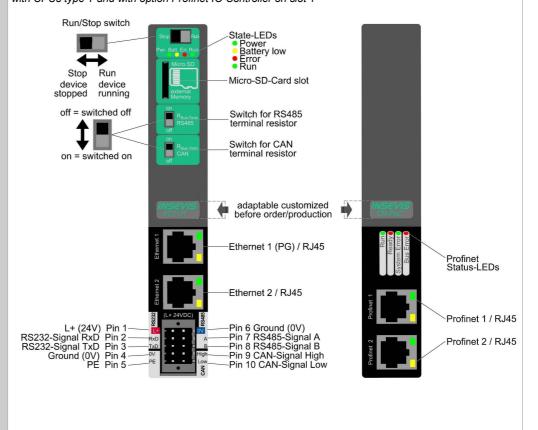

Technical data		
Dimensions W x H x D (mm) Cut out W x H (mm) Weight	286 x 188 x 47 262 x 165,5 ca. 950 g	
Operating temperature range Storage temperature range	-20°C +60°C (without condensation) -30°C +80°C	
IP-protection class front panel rear side	IP65 IP41	
Connection technology	removable connector with 2 bolt flanges (cage clamp technology) for cross section up to max. 1,5mm²	
Load voltage L+	24V DC (11 V 30V DC)	
Current consumption Power dissipation	200mA 1300mA 4,8W (typ.) 31,2W (max. with Profinet and full of periphery)	
Start-up current	< 3A	
Diagonal of display (inch) Display resolution (pixel)	10,1" (258mm) 1024x600 Pixel (16:9)	
Display unit Operating unit	TFT display with 16Bit colours analog resisitive touch screen	
Visualization tool unit to reference there	VisuStage PC710T, PC1017T	
Technical data	CPU	
CPU-type	CPU-T (PC1017 T)	
Working memory = battery backed load memory Diagnostic buffer	1MB 512 kByte remanent 8MB 100 entries (all remanent)	
Flash internal - for visualization external memory	48 MByte Micro SD, up to max. 8 GByte (not necessary for S7-program, only for archiving)	
OB, FC, FB, DB Local data Number of in- and outputs Process image Number of merkerbytes Number of taktmerker Number of timer, counter Depth of nesting	each 2.048 32kByte (2kByte per block) in each case 4.096 Byte (32.769 Bit) addressable in each case 4.096 Byte (default set is 128 Byte) 4.096 (remanence adjustable, default set is 015) 8 (1 Merkerbyte) in each case 512 (each remanence adjustable, default set is 0) up to 16 code blocks	
Real-time clock elapsed hour counter	yes (accumulator-backed hardware clock) 1 (32Bit, resolution 1h)	
Program language Program system	STEP 7® - AWL, KOP, FUP, S7-SCL, S7-Graph from Siemens SIMATIC® Manager from Siemens or products compatible to it	
Operating system Program unit to reference	compatible to S7-300® from Siemens CPU 315-2DP/PN (6ES7 315-2EH14-0AB0 and firmware V3.1 Siemens)	
Serial interfaces (protocols)	COM1: RS 232 (free ASCII) COM2: RS 485 (free ASCII, Modbus-RTU)	
Ethernet (protocols)	2x Ethernet: (switch or separated ports): 10/100 MBit with parts of CP343 functionality (RFC1006, TCP, UDP, Modbus-TCP)	
CAN (protocols)	CAN-telegrams (Layer 2), compatible to CANopen [®] master/ slave 10 kBaud 1 MBaud	
optional interfaces (protocols)	Profinet IO Controller	
Onboard periphery	7 slots (optional Profinet uses Slot 1)	
Decentral periphery	- INSEVIS- periphery (with automatic configuration via "ConfigStage") - diverse external periphery families (Modbus RTU/TCP, CAN) - all CANopen® slaves according to DS401 - all Profibus DP-V0-slaves	

TI_PC1017T_Engl_Rev03 3/4



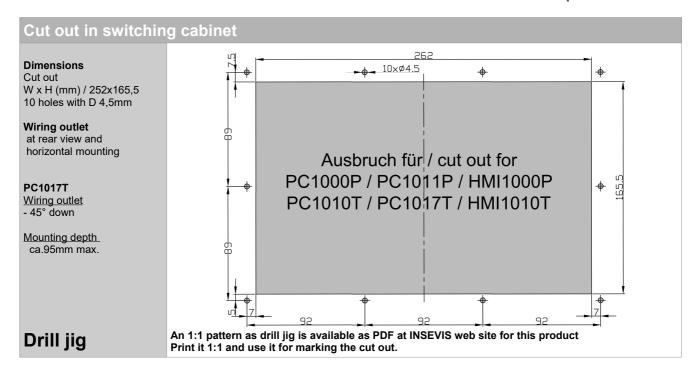

Ordering data of devices			
Identification	Standard	With Profinet IO Controller	
S7-Panel-PLC PC1017T	PC1017T-0-02	PC1017T-PNC-02	

Ordering data of accessoires (Peripheral modules to be ordered separately as required)			
Identification / Order-No.	Identification / Order-No.		
Connector 2x5pin (bolt flanges) / E-CONS10-00	Micro SD-card 2GB (external memory) / E-MSD2-00		
Micro SD-card 4GB (external memory) / E-MSD4-00	Micro SD-card 8GB (external memory) / E-MSD8-00		

Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

Manuals, sample programs

Additional documentation by manuals is available as well sample applications at the download area of www.insevis.com in English language for free download.

This and all other documentation and software, supplied or hosted on INISEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of theses documentation and software and every copy of it are reserved to INSEVIS GmbH.

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.

Disposal

Do not throw old appliances in the household waste! In the interest of environmental protection, old appliances must be collected separately from unsorted municipal waste. You can find out more about the proper disposal / return of your old appliance at www.insevis.com/disposal. Attention: The deletion of personal data on the old devices to be disposed of is the responsibility of the end user.

With publication of this information all other versions are no longer valid

INSEVIS Gesellschaft für Systemelektronik und Visualisierung mbH • Am Weichselgarten 7 • D-91058 Erlangen TI_PC1017T_Engl_Rev03