

## Product Information

# S7-Compact-PLC CC300V



(valid from version CC300V-xxx-**03**)

### Changes to older versions of this document

**Rev. 02** → **03**: description of Profibus-signals made compatible to Siemens-manuals

**Rev. 03** → **04**: new design line, connectors added

**Rev. 04** → **05**: Information for disposal of old equipment

## Description

Compact-PLC for  
35mm DIN-rail

- CC300V

### Standard configuration:

- **RS232 with**
  - free ASCII-protocol
- **RS485 with**
  - free ASCII-protocol
  - Modbus RTU
  - with switchable terminate resistors for RS485
- **Ethernet with**
  - RFC1006 (S7-Connect-  
ion with Put/Get),
  - Send/ Receive via  
TCP and UDP,
  - Modbus TCP
- **CAN with**
  - protocol compatible  
to CANopen®
  - layer2-communication
  - with switchable terminate  
resistors for CAN

- **Micro-SD-slot**
  - for SD-cards up to  
8 Gbyte (just to archive  
DBs as csv-file, not for  
storing program – this is  
kept in CPU-flash

- **Run/Stop-switch**
- **Status LEDs** for  
Power, Battery, Error, Run
- **Inserting stripes** for Logo  
and identification  
(thereby customized  
adaption possible easy)

- optional configuration:**  
(optional)
- **Profibus DP-Master**
  - **Profibus DP-Slave**
  - with switchable terminate  
resistors for Profibus

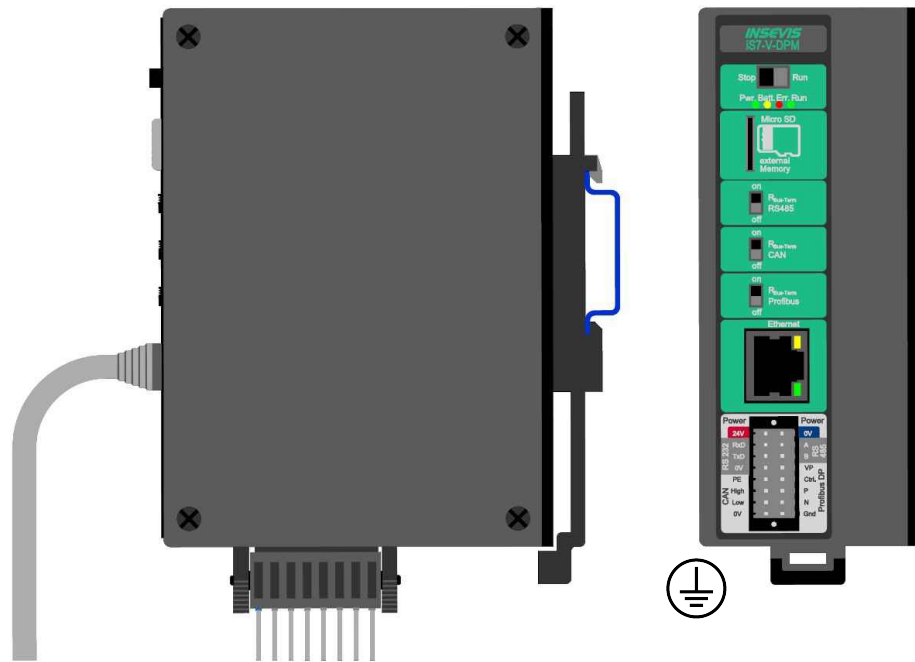


Figure above: Compact-PLC CC300V rear view and view from the side

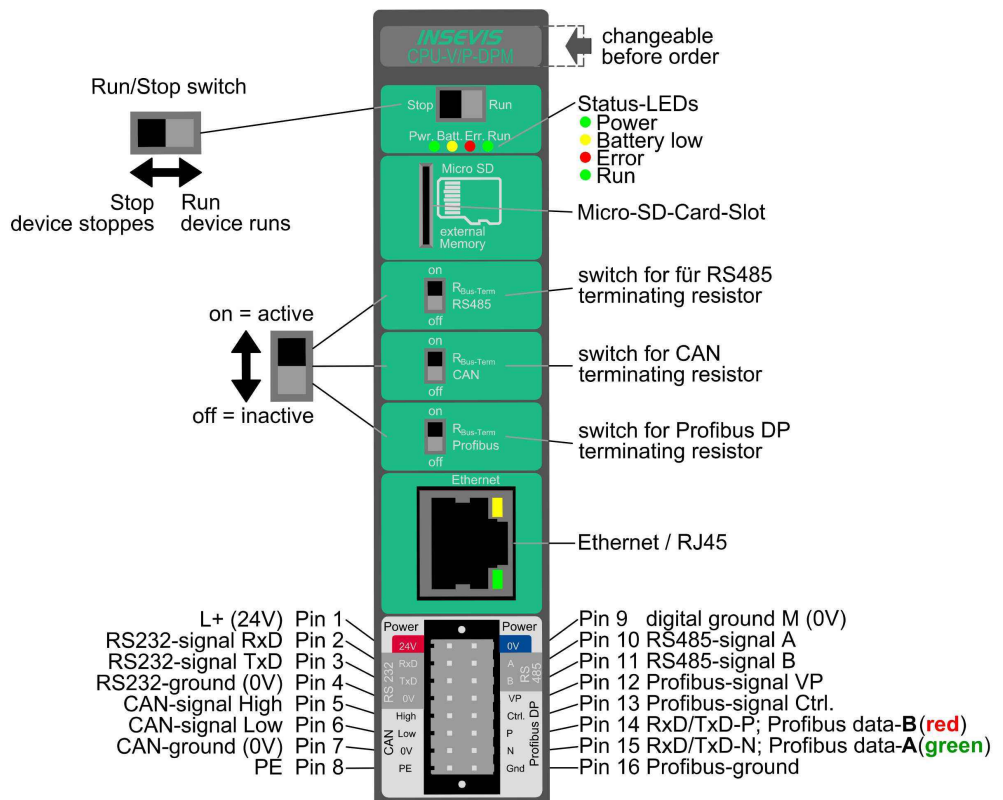


Figure above: Identification of all CPUs of all Compact-PLCs basic devices with CPU-type V and with Profibus DP Master

Technical data	CC300V
Dimensions W x H x D (mm) Weight	47 x 116 x 84 ca. 700g
Mounting IP-protection class	to clip on a 35mm DIN-rail IP41
Operating temperature range Storage temperature range	-20°C ... +60°C (without condensation) -30°C ... +80°C
Connection technology	connector with pin-marked pushers and 2 bolt flanges on side (cage clamp technology) for cross sections up to max. 1,5mm²
Current consumption Power dissipation	20 mA ... 175 mA 0,5 W (typ.), 2 W (max.)
Start-up current	< 3A
Technical data	CPU
CPU-Type	<b>Typ V (CC300V)</b>
Working memory = battery backed load memory Diagnostic buffer	512kB, thereof 256 kByte remanent data 100 messages (all remanent)
Internal flash memory External flash memory	4 MByte Micro SD, up to max. 8 GByte ( not necessary for operation)
OB, FC, FB, DB Lokal data Number of in- and outputs Process image Number of Merkerbytes Number of Taktmerker Number of timer, counter Depth of nesting	each 1.024 32kByte (2kByte per block) in each case 2.048 Byte (16.384 Bit) addressable in each case 2.048 Byte (default set is 128 Byte) 2.048 (remanence adjustable, default set is 0..15) 8 (1 Merkerbyte) in each case 256 (each remanence adjustable, default set is 0) up to 16 code blocks
Real-time clock elapsed hour counter	yes (accumulator-backed hardware clock) 1 (32Bit, resolution 1h)
Program language Program system	STEP 7® - AWL, KOP, FUP, S7-SCL, S7-Graph from Siemens SIMATIC® Manager from Siemens or products compatible to it
Operating system Program unit to reference	compatible to S7-300® from Siemens CPU 315-2DP/PN (6ES7 315-2EH14-0AB0 and with Firmware V3.1) from Siemens
Serial interfaces (protocols)	COM1: RS 232 (free ASCII) COM2: RS 485 (free ASCII, Modbus-RTU)
Ethernet (protocols)	Ethernet: 10/100 Mbit with CP343 functionality (RFC1006, TCP, UDP, Modbus-TCP)
CAN (protocols)	CAN-Telegrams (Layer 2), compatible to CANopen® Master 10 kBaud ... 1 MBaud
Profibus (protocols)	Profibus DP V0 master/ slave 9,6kBaud ... 12 MBaud
Onboard-periphery	none
Decentral periphery	- INSEVIS- Periphery (with automatic configuration via „ConfigStage“) - diverse external periphery families (Modbus RTU/TCP, CAN) - all CANopen® slaves according to DS401 - all Profibus DP-V0-slaves

## Ordering data devices

Identification	basic version	with Profibus DP Master	with Profibus DP Slave
S7-Compact-PLC <b>CC300V</b>	CC300V-0-03	CC300V-DPM-03	CC300V-DPS-03

## Ordering data of accessoires (Peripheral modules to be ordered separately as required)

Identification / Order-No.	Identification / Order-No.
Connector 2x8pin (bolt flanges) / E-CONS16-00	Micro SD-card 2GB (external memory) / E-MSD2-00
Profibus-adapter for 12MBaud-nets / E-AD-DP12	Micro SD-card 4GB (external memory) / E-MSD4-00
	Micro SD-card 8GB (external memory) / E-MSD8-00

### Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

### Manuals, sample programs

Additional documentation by manuals is available as well sample applications at the download area of [www.insevis.com](http://www.insevis.com) in English language for free download.

### Copyright

This and all other documentation and software, supplied or hosted on INSEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of these documentation and software and every copy of it are reserved to INSEVIS GmbH.

### Trade Marks

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

### Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.

### Disposal



Do not throw old appliances in the household waste! In the interest of environmental protection, old appliances must be collected separately from unsorted municipal waste. You can find out more about the proper disposal / return of your old appliance at [www.insevis.com/disposal](http://www.insevis.com/disposal).

Attention: The deletion of personal data on the old devices to be disposed of is the responsibility of the end user.

With publication of this information all other versions are no longer valid.