

# Product information

# S7-Panel-PLC

# PC1560T



Image of PC1560T without Profinet (PC1560T-0-03)



Image of PC1560T with Profinet (PC1560T-PNC-02)



(valid from PLC-version PC1560T-xxx-**02**)

## Changes to older versions of this document

- Rev. 01** → **02**: new images, new design line, connectors added, drill jig info added
- Rev. 02** → **03**: new temperature ranges
- Rev. 03** → **04**: Slim-CPU-T integrated (without Profinet)
- Rev. 04** → **05**: Outer dimension front plate corrected
- Rev. 05** → **06**: Information for disposal of old equipment

## Description

### S7-Panel-PLC with

- 15,6" TFT display (1366x678 pixel)
- resistive touch (front protection class IP65)

### Standard configuration:

#### RS232 with

- free ASCII protocol

#### RS485 with

- free ASCII protocol
- Modbus RTU
- with switchable terminate resistors for RS485

#### 2x Ethernet (as switch or separated) with

- S7-connection (Put/Get)
- Send/ Receive via TCP and UDP,
- Modbus TCP

#### CAN

- protocol compatible to
  - CANopen®
  - Layer2 communication
- with switchable terminate resistors for RS485

#### Micro-SD-card slot

- for SD-cards up to 8GByte

#### Run/Stop switch

#### State LEDs for

Power, Battery, Error, Run

#### Inserting stripes

- for Logo and identification (thereby customized adaption possible easy)

#### Additional configuration:

(optional)

#### Profinet IO Controller

#### Scope of delivery:

- Mounting kit with grounding terminal i
- Technical data sheet


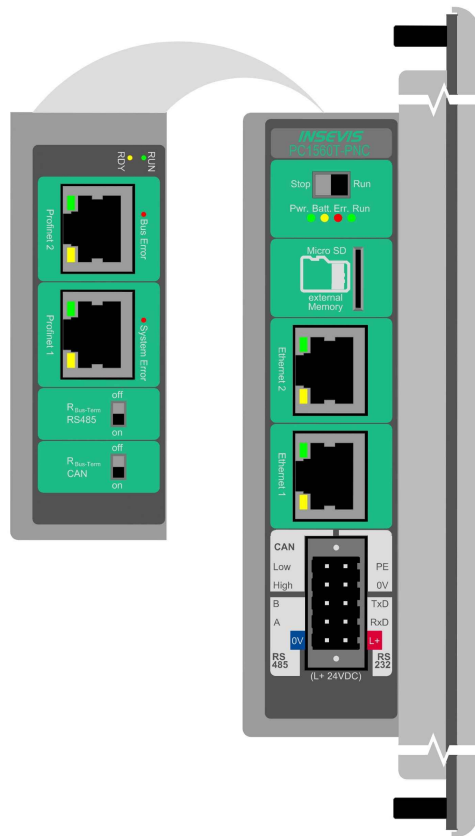


Figure above: View to rear side and connections sides of PC1560T-PNC (horizontal use)

Figure below: CPU-connections of all Panel-PLC-basic devices (without periphery slots) with CPUs type T and with option Profinet IO Controller

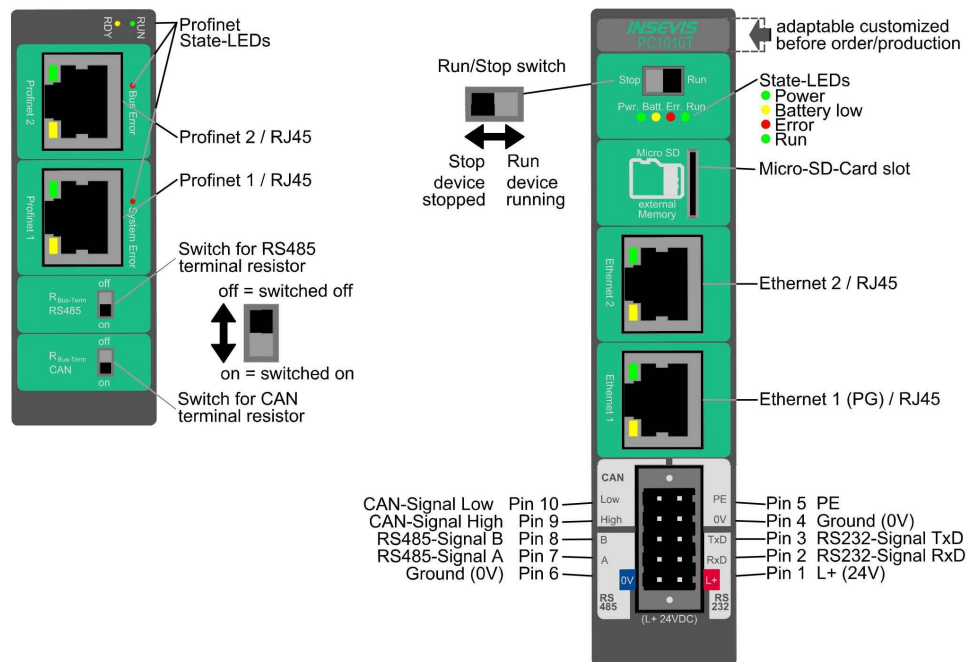

→ Interfaces are shifted a little bit among each other at the version PC1560T-0-03, but functions and connections are kept similar to the other CPU-T versions (no image, self explanatory)


Technical data	
Dimensions W x H x D (mm)	420 x 260 x 59 (53 mounting depth – PC1010T-PNC-02) 420 x 260 x 60 (54 mounting depth - PC1010T-0-03)
Cut out W x H (mm) / Weight	387 x 228 / ca. 1.900 g
Operating temperature range	0°C ... +50°C (without condensation)
Storage temperature range	-20°C ... +60°C
IP-protection class front panel	IP65
rear side	IP41
Connection technology	removable connector with 2 bolt flanges (cage clamp technology) for cross section up to max. 1,5mm <sup>2</sup>
Load voltage L+	24V DC (11 V ... 30V DC)
Current consumption	500mA ... 650mA
Power dissipation	12W (typ.) ... 15W (with Profinet)
Start-up current	< 3A
Diagonal of display (inch)	15,6" (397mm)
Display resolution (pixel)	1366x768 Pixel (16:9)
Display unit	TFT display with 16Bit colours
Operating unit	analog resistive touch screen
Visualization tool unit to reference there	VisuStage PC1560T, PC1567T
Technical data	
CPU	
CPU-type	<b>CPU-T (PC1560T)</b>
Working memory = battery backed load memory	1MB 512 kByte remanent 8MB
Diagnostic buffer	100 entries (all remanent)
Flash internal - for visualization external memory	48 MByte Micro SD, up to max. 8 GByte (not necessary for S7-program, only for archiving)
OB, FC, FB, DB Lokal data	each 2.048 32kByte (2kByte per block)
Number of in- and outputs	in each case 4.096 Byte (32.769 Bit) addressable
Process image	in each case 4.096 Byte (default set is 128 Byte)
Number of Merkerbytes	4.096 (remanence adjustable, default set is 0..15)
Number of Taktmerker	8 (1 Merkerbyte)
Number of timer, counter	in each case 512 (each remanence adjustable, default set is 0)
Depth of nesting	up to 16 code blocks
Real-time clock elapsed hour counter	yes (accumulator-backed hardware clock) 1 (32Bit, resolution 1h)
Program language	STEP 7® - AWL, KOP, FUP, S7-SCL, S7-Graph from Siemens
Program system	SIMATIC® Manager from Siemens or products compatible to it
Operating system	compatible to S7-300® from Siemens
Program unit to reference	CPU 315-2DP/PN (6ES7 315-2EH14-0AB0 and firmware V3.1 Siemens)
Serial interfaces (protocols)	COM1: RS 232 (free ASCII) COM2: RS 485 (free ASCII, Modbus-RTU)
Ethernet (protocols)	2x Ethernet: (switch or separated ports): 10/100 MBit with parts of CP343 functionality (RFC1006, TCP, UDP, Modbus-TCP)
CAN (protocols)	CAN-telegrams (Layer 2), compatible to CANopen® master 10 kBaud ... 1 MBaud
optional interfaces (protocols)	Profinet IO (only at PC1560T-PNC-02) Controller
Onboard periphery	none
Decentral periphery	- INSEVIS- periphery (with automatic configuration via „ConfigStage“) - diverse external periphery families (Modbus RTU/TCP, CAN) - all CANopen® slaves according to DS401 - all Profinet IO devices

## Cut out in switching cabinet

**Dimensions / Cut out**  
(W x H / mm) 387 x 228  
14 holes with D 4,5mm

**Mounting depth**  
54mm (PC1560T-PNC-02)  
53mm (PC1560T-0-03)

**Wiring outlet**  
standard interfaces  
2x RJ45 (Ethernet)  
E-CON(S)10 (Rest)  
PC1560T-PNC-02 → to right\*  
PC1560T-0-03 → to left\*  
Profinet (PC1560T-PNC-02)  
2x RJ 45 → to the top\*

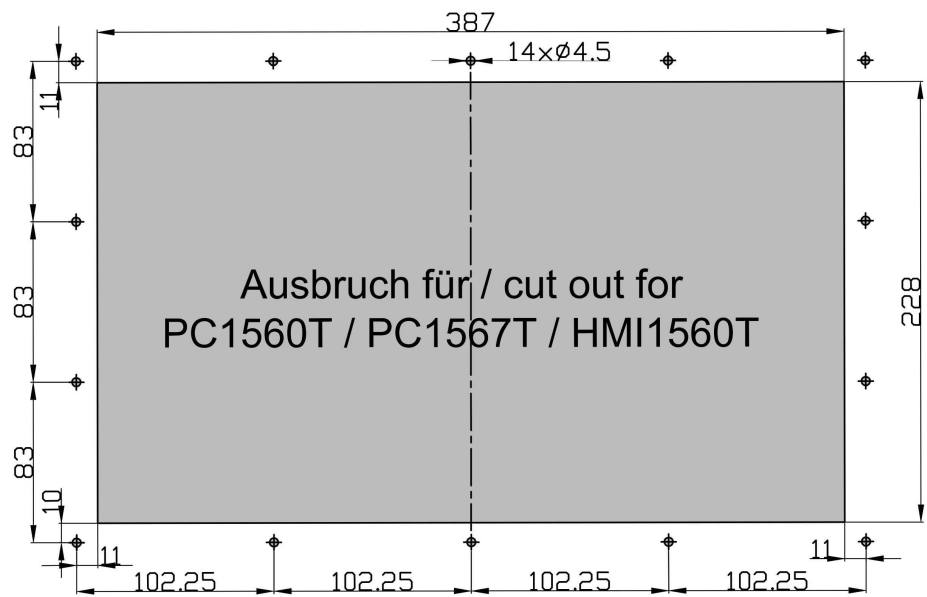

**Drill jig** → An 1:1 pattern as drill jig is available as PDF at INSEVIS web site for this product  
Print it 1:1 and use it for marking the cut out.

## Ordering data of devices

Identification	Standard	With Profinet IO Controller
S7-Panel-PLC <b>PC1560T</b>	PC1560T-0-03	PC1560T-PNC-02

## Ordering data of accessoires

Identification / Order-No.	Identification / Order-No.
Connector 2x5pin (bolt flanges) / E-CONS10-00	Micro SD-card 2GB (external memory) / E-MSD2-00
Micro SD-card 4GB (external memory) / E-MSD4-00	Micro SD-card 8GB (external memory) / E-MSD8-00

### Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

### Manuals, sample programs

Additional documentation by manuals is available as well sample applications at the download area of [www.insevis.com](http://www.insevis.com) in English language for free download.

### Copyright

This and all other documentation and software, supplied or hosted on INSEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of these documentation and software and every copy of it are reserved to INSEVIS GmbH.

### Trade Marks

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

### Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.

### Disposal



Do not throw old appliances in the household waste! In the interest of environmental protection, old appliances must be collected separately from unsorted municipal waste. You can find out more about the proper disposal / return of your old appliance at [www.insevis.com/disposal](http://www.insevis.com/disposal).

Attention: The deletion of personal data on the old devices to be disposed of is the responsibility of the end user.

With publication of this information all other versions are no longer valid.